

| | Measuring Quality

FGE-HXY High Capacity Digital Force Gauges



FGE-HXY

High Capacity Digital Force Gauges with 180° reversible display & dual labeled keypad for both push, pull applications

The Series FGE-HXY Digital Force Gauges offer an enhanced heavy-duty housing allowing them to be utilized in high capacity tension and compression applications. Simple one button adjustment alters units, while pressing the peak button quickly produces the highest recorded value during the test. The 180° reversible display combined with the adjustable force direction and dual labeled keypad enable the FGE-HXY to excel in both compression and tension applications in any direction. These instruments are utilized in a variety of applications such as, incoming quality inspection, finished goods testing, R&D, ergonomic and isokinetic testing or almost any portable or force stand testing requirement.

Models are available in 500 lb ranges providing necessary performance for high capacity testing.

Features

- 1000 Hz Sample Rate provides faster sampling producing better resolution and more accurate results
- Ideal for strict tolerances with its high accuracy +/-0.2% F.S.
- Measure and record compression and tension tests. Permits true "push-pull" testing
- 180° Reversible display and dual printed keypad allows usage as a portable gauge or mounted upside down on a test stand
- 1 million operation load cell with superior overload protection provides a long-life, damage free product
- High-capacity rugged, ergonomic die cast aluminum construction allows usage on production floor
- Variable display response rate aids viewing of readings
- Real Time or Peak hold mode easily selectable with a single button push
- Flexible user preference with one button selection of engineering units
- Field calibration through keypad eliminates down time
- Dual power capable with rechargeable battery or AC line voltage
- CE Mark & RoHS Approval

FGE-HXY with Accessories in Protective Carrying Case



FGE-HXY Specifications

| Capacity | 500 lb, 250 kg, 2500 N |
|-------------------------|---|
| Resolution | 0.1 lb/0.1 kg/1 N |
| Accuracy | ±0.2% F.S. @ 73°F (23°C) |
| Display | 4-digit LCD, 0.5" high (12 mm) Units 0.29" (7 mm). Reversible. Minus sign for tension. |
| Display Update | 0.05, 0.1, 0.2, 0.3, 0.5, 1 sec |
| Sampling Rate | 1000 Hz |
| Overload Capacity | 150% of F.S. |
| Power | Rechargeable Ni-MH battery or universal AC adapter/charger (100-240 VAC, 50/60 Hz) |
| Auto Power Shut-Off | Yes (not active if adapter/charge is in use) |
| Battery Charge | 12 hours (when fully charged) |
| Recharge Time | Approximately 18 hours when fully discharged |
| Temperature Limit | 32 - 104°F (0 - 40°C) |
| Dimensions | 8.43" x 3.23" x 2.25" (214 x 82 x 57 mm) |
| Product Weight | Approx. 2 lb (900 g) |
| Package Weight | Approx. 7.45 lb (3.38 kg) |
| Certification | CE, RoHS |
| Warranty | 2 year |
| Included Accessories | AC adapter/charger, carrying case, 2 handles, hanger, metric thread to inch adapter and attachments (flat head, hook, chisel, notched head, cone head, extension rod) |

Ordering Details


| FGE-500HXY | 500 lb high capacity digital force gauge |
|------------|--|
| NIST-FG-HX | NIST traceable calibration certificate for ranges 200 to 1000 lbs. |
| FGE-PT500 | 500 lb capacity FGE-HXY in ergonomic testing kit. Kit includes all the standard FGE-HXY accessories but adds padded ERGO accessories and NIST traceable certificate. |


Accessories

| FG-M10ADP | Standard adapter set with M10 threads for ranges Includes: chisel, cone, flat head, notched head, hook, extension rod |
|-------------|---|
| FG-M10CL | Chisel adapter with M10 thread for ranges |
| FG-M10CN | Cone head adapter with M10 thread for ranges |
| FG-M10FL | Flat head adpater with M10 thread for ranges |
| FG-M10GV | Notched head adapter with M10 thread for ranges |
| FG-M10HK | Hook adapter with M10 thread for ranges |
| FG-M10RD | Extension rod adapter with M10 thread for ranges |
| FG-09V120UC | Universal chager adapter for 120/240V AC |

Note: Additional accessory adapters available. Please contact the factory.

FGE-HXY Dimensions

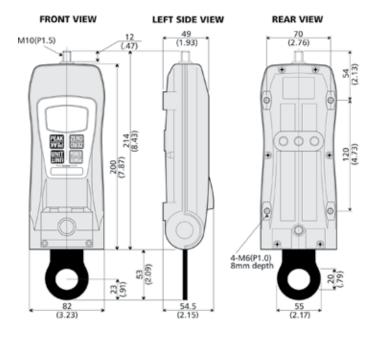



ELECTROMATIC Equip't Co., Inc., 600 Oakland Ave, Cedarhurst, New York 11516 - USA **Tel**: 800-645-4330 / 516-295-4300 **Fax**: 516-295-4399 **Web**: CheckLine.com **Email**: info@CheckLine.com